

HWF2V-COM and HWF2A-COM

FDNY Application Configuration

Perform the following steps to configure the HWF2V-COM and HWF2A-COM to meet FDNY requirements for five minute fault annunciation. Refer to the *HWF2-COM Installation and Setup Guide # 800-24452* before performing any programming changes.

AlarmNet 360 Programming (Firmware v3.0.7 or Greater)

1. Verify that the HWF2-COM firmware is version 3.0.7 or greater.
2. Logon to the AlarmNet® 360 website: <https://services.alarmnet.com/alarmnet360/alarmnetdirect/account/logon>

Important Note: NFPA 72 code requires the installer to be onsite when programming the communicator or making changes to the HWF2-COM radio configuration.

3. Go to the **Device Programming** page.
4. Choose **Program Device** and then choose **Other Communicators**.
5. Follow the steps to set up the Customer Account.
6. Program the Supervision Interval to "2010 IP & GSM".
7. Click **Edit** and then click **Advanced Programming**.
8. Set both the IP Fault Time and Cellular Fault Time to **05**.
9. Click **Finish** and then exit out of AlarmNet 360.
10. Register the Communicator with AlarmNet.
11. Test the HWF2-COM per NFPA 72 and local requirements.

Important Note: If the 7720P Programming Tool is used to modify programming on the HWF2-COM after AlarmNet 360 website programming has been performed, the radio will default back to the original factory preset fault times.