



Crest Economy Pullcord Station

5600
5601 (With call placed light)
5604 (With call placed light)

Typical Installation

1. The brown and yellow wires are normally open outputs and yellow is usually connected to the corridor light and the nurse station light, brown to sounder.
2. The blue and green wires are normally closed contacts when the switch is in the off (or up) position. See note (4)
3. The red and orange wires are used for incoming power are usually connected together at the time of installation.
4. Cap all unused wires.

Specifications

ELECTRICAL


Max Current and Voltage Rating: 4A @ 30V

MECHANICAL

Terminals: Brass, silver plated
Contact Life: 25,000 cycles minimum
Mounting: Fits standard single gang back box

SIZE MEASUREMENTS

Plate: 4.5" x 2.75" (1 Gang)

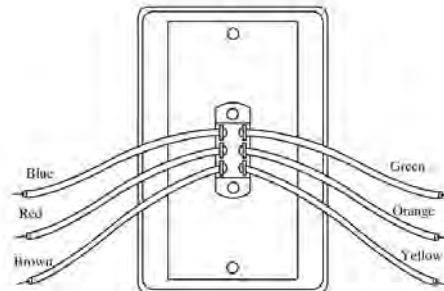


Function Table

Color	Red	Orange	Blue	Green	Brown	Yellow
Up Position	Power	Power	ON	ON	OFF	OFF
Down Position	Power	Power	OFF	OFF	ON	ON

Schematic

For 5600

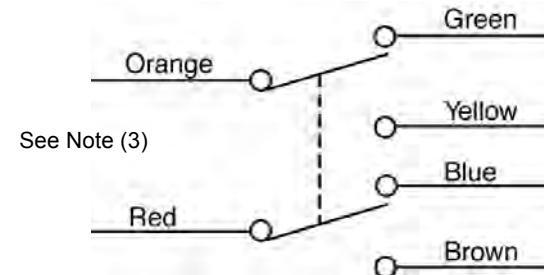

Schematic

For 5601 & 5604

