

## Installation of RPL-LK-Y1211 Replacement Lockset

## A. Parts

The lockset consists of 7 parts:

- Key
- Lock
- Cam
- Washer
- Screw
- Spur washer
- Nut

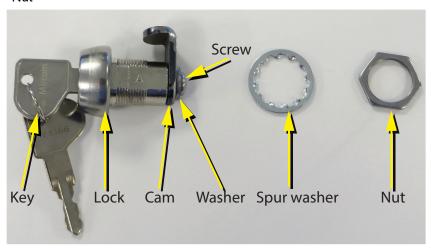


Figure 1 Parts of the lockset

## B. Remove the old lockset

1. Remove the screw on the old lock and remove the old lockset.

## C. Install the new lockset

- 1. Remove the screw, washer, and cam from the new lockset.
- 2. Insert the new lock into the hole in the door.
- 3. Secure the new lock with the spur washer and nut. See Figure 2.
- 4. Re-attach the cam, washer and screw. See Figure 3.

**Note:** Make sure that the cam is aligned with the keyhole. When the lock is in the locked position, the cam and the keyhole are vertical. See Figure 4.

5. Close and lock the door.

You are done! If you need more help, call us at 1-888-660-4655.

LT-6668 Rev 1 Page 1 of 2



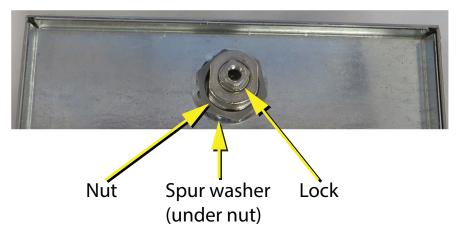


Figure 2 New lock, nut and spur washer


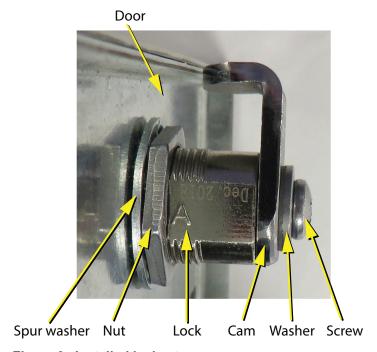


Figure 3 Installed lockset

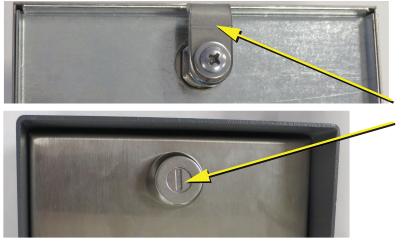

Cam and keyhole are vertical when locked

Figure 4 Cam and keyhole are vertical when locked

LT-6668 Rev 1 Page 2 of 2