



BPS-CVR Power Supply Cover Installation Sheet

Description

The BPS-CVR fits all BPS6A, BPS10A, APS6A, and APS10A Series power supplies.

Installation

1. De-energize the power supply. Disconnect battery power first and then disconnect primary power. Wait at least 30 seconds for stored energy to dissipate before proceeding.
2. Remove the two screws on the power supply circuit board at the locations shown in Figure 1, and replace them with the threaded standoffs provided in the BPS-CVR hardware kit.
3. Using the two screws from the previous step, or two screws from the hardware kit, attach the BPS-CVR to the standoffs you just installed on the power supply circuit board. See Figure 2.

Figure 1: Remove existing screws


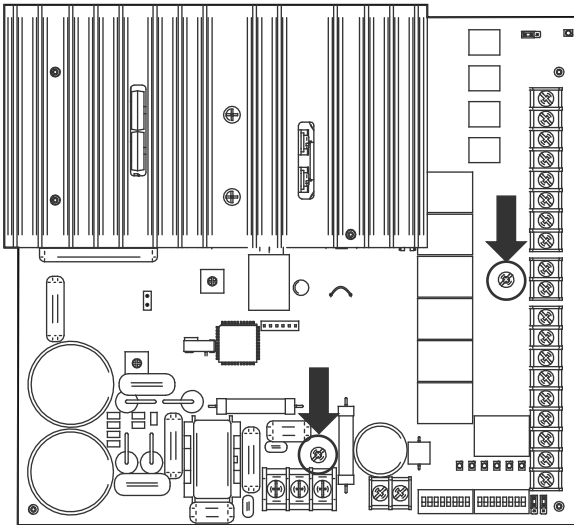


Figure 2: Attaching the BPS-CVR

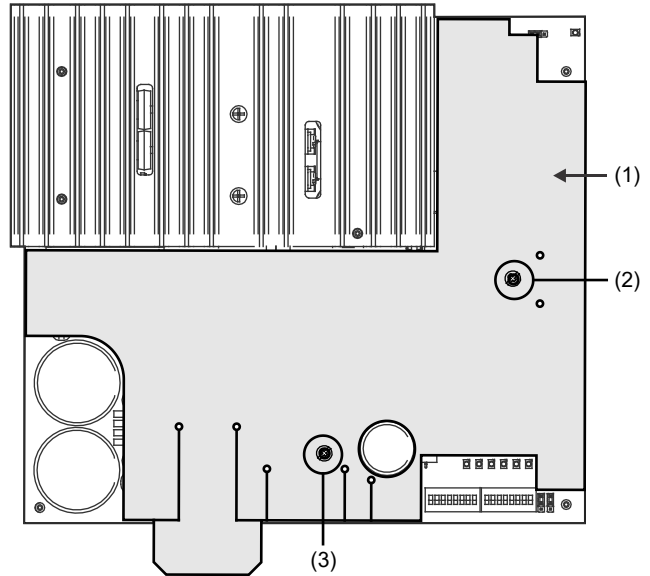

- (1) BPS-CVR
- (2) Screw
- (3) Screw

Contact information

For contact information, see www.edwardsfiresafety.com.