


Installation Instructions

Infinity IAMFFPJAC Fire Fighter's Phone Jack



**PHONE
PLUG/JACK**

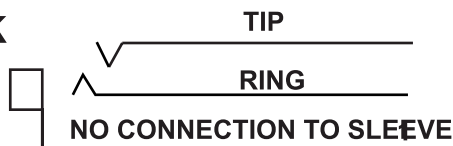

Installation and wiring should be performed by qualified personnel only - Equipment damage and/or malfunction may result from improper installation. Remove all power from the system until the installation is complete and ready for testing. All work of any kind shall be performed to meet the requirements of any and all local, state and federal codes and/or standard set by the authority having jurisdiction.

This package includes all necessary parts except the mounting box, cover and mounting screws. Utilize a standard single gang mounting box (IGB). One gang space is required for each module to be installed. A standard *Infinity* style cover plate (IGP) is required to cover the assembly.

Instructions:

1. Mount the box securely into the wall.
2. Connect conduit and pull wiring as required.
3. Terminate wires as required for your application.
4. Refer to the wiring diagram.
5. Attach the frame to the box using frame screws #6s.
6. Single gang installation: Proceed to step 9.
7. Multi gang installation: Repeat steps 4 thru 8 until all modules are wired and installed.
8. Review and confirm field wiring. Damage and/or malfunction can result from improper wiring and/or set up.
9. Place cover over assembly and attach to box with cover screws.
10. Power up system to test for proper operation of all zones and function.

Ordering Information:

Part #	Description
IAMFFPJAC	1/4" Fire Fighter's Phone Jack

Space Age Electronics, Inc.
www.1sae.com
800.486.1723 voice
508.485.0966 direct
508.485.4740 fax