



AL1002ULADA ***NAC Power Extender***

Installation Guide

(See Application Guide for additional information)



**Overview:**

The Altronix AL1002ULADA is an extremely cost effective 10 amp remote power supply/battery charger. It may be connected to any 12 or 24 volt Fire Alarm Control Panel (FACP). Primary applications include Notification Appliance Circuit (NAC such as strobes and horns) expansion support to meet ADA requirements. It also provides auxiliary power to support system accessories. The unit delivers electronically regulated and filtered 24 volt power to Class B, Style W, X, Y or Class A, Style Z NAC loop circuits. Additionally, a separate 1.0A auxiliary output for four (4)-wire smoke detectors is available. The 10 amp max. alarm current can be divided between the four (4) outputs for powering NAC devices. Each output is rated at 2.5 amp max., and can be independently programmed for Steady, Temporal Code 3 or Strobe Synchronization. All outputs may be programmed for Input to Output Follower Mode (output will follow input. i.e. March Time Input, March Time Output). An individual output of 4 amp is achieved by paralleling 2 outputs. In non-alarm condition independent loop supervision for Class A, Style Z and/or Class B, Style W, X, Y FACP NAC circuits is provided. In the event of a loop trouble, the FACP will be notified via the steered input (input 1 or input 2). In addition, there are common trouble output terminals (NC, C, NO) which are used to indicate general loop/system trouble. A common trouble input is provided for optional NC (normally closed) devices to report trouble to the FACP. Two (2) FACP signaling outputs can be employed and directed to control supervision and power delivery to any combination of the four (4) outputs.

Specifications:**Agency Listings:**

- UL Listed Control Units for Fire Protective Signaling Systems (UL 864), Power Supplies for Fire Protective Signaling Systems (UL 1481).
- MEA - NYC Department of Buildings Approved.
- CSFM - California State Fire Marshal Approved.
- FM - Factory Mutual Approved.
- NFPA 72 Compliant.

Input:

- Power input 120VAC 60 Hz, 5 amp.
- Two (2) Class A, Style Z or two (2) Class B, Style W, X, Y FACP inputs.
- Two (2) NC dry contact trigger inputs.

Output:

- Class 2 Rated power limited outputs.
- 24VDC @10 amp max total alarm current.
- 2.5 amp max current per output.
- Separate 1.0 amp auxiliary output.
- Two (2) outputs may be paralleled for more power on an indicating circuit (*see Application Guide*).
- Programmable supervised indicating circuit outputs: Four (4) Class B, Style W, X, Y or Two (2) Class A, Style Z or One (1) Class A, Style Z and Two (2) Class B, Style W, X, Y (*see Application Guide*).
- Thermal and short circuit protection with auto reset.

Battery Backup:

- Built-in charger for sealed lead acid or gel type batteries.
- Automatic switchover to stand-by battery when AC Fails.
- Zero voltage drop when switching over to battery backup.

Supervision:

- AC fail supervision (form "C" contact, 1 amp / 28VDC). Factory set for 1 minute with optional 2 hour delay setting (field selectable).
- Instant local AC trouble reporting relay (form "C" contact, 1 amp / 28VDC).
- Battery presence and low battery supervision (form "C" contact, 1 amp / 28VDC).

Visual Indicators:

- Input and output status LED indicators.

Special Features:

- 2-wire horn/strobe Sync mode allows audible notification appliances (horns) to be silenced while visual notification appliances (strobes) continue to operate.
- Temporal Code 3, Steady Mode, Input to Output Follower Mode (maintains synchronization of notification appliances circuit).
- Compatible with 12VDC or 24VDC fire panels.
- Output loop supervision steered to input 1 or input 2.
- Signal circuit trouble memory (helps identify intermittent loop problems).
- Common trouble input and output.
- Ground fault detection.

Added Features:

- Unit includes power supply, red enclosure, cam lock, and battery leads.

Enclosure Dimensions and Descriptions:**AL1002ULADA**

15.5"H x 12"W x 4.5"D

Product Weight:

17 lbs.

Power Supply Specifications:

AC Input:	120VAC 60Hz, 5 amp.
Output:	Four (4) regulated supervised NAC output circuits, 24VDC, 2.5 amp maximum current. One (1) aux. regulated 24VDC power output circuit 1 amp, non-supervised total output current must not exceed current 10 amp in Alarm Condition.
Battery:	Use two (2) 12VDC / 12AH or two (2) 12VDC / 7AH batteries connected in series.
Stand-by/Alarm Current Consumption:	90mA/175mA
EOL Resistor (end of line):	2.2K (2200 ohm), Altronix Model # AL-EOL22 (included).
Ground fault maximum test impedance:	1000 ohm.

Stand-by Specifications:

Stand-by Batteries	Stand-by Time Total Amp/Minutes	Alarm Output Current	Aux Output
24VDC/12AH (use two (2) 12VDC batteries in series)	24 Hours	10 amp/15 Minutes	50mA
	60 Hours	10 amp/5 Minutes	-
24VDC/7AH	24 Hours	10 amp/5 Minutes	-
24VDC/36AH Battery	24 Hours	10 amp/15 Minutes	1 amp
12VDC/36AH Battery	24 Hours	10 amp/15 Minutes	1 amp

Note: Unit is equipped with 1 amp max. auxiliary output: “AUX” will remain battery backed up during power outage. For loads connected to “AUX” please, refer to battery “Stand-by Specifications” above for ratings. When loads are connected to “AUX” output during alarm condition, the remaining outputs may, not exceed 10 amp total alarm current (example: AUX = 1 amp, outputs up to 9 amp).

Installation Instructions:

Units should be installed in accordance with article 760 of The National Electrical Code as well as NFPA 72 and all applicable Local Codes.

1. Mount in a desired location.

Carefully review:

Application Guide (for AL802ULADA, AL1002ULADA)

Power Supply Specifications

Stand-by Specifications

Output Programming Selection Table

Sync Mode Selection Table

Terminal Identification Table

LED Status Indication Table

(pg. 3)

(pg. 3)

(pg. 4)

(pg. 4)

(pg. 5)

(pg. 6)

2. Connect green lead to earth ground (*Fig 1*). Connect the line (L), ground (G), and neutral (N) terminals to a separate unswitched AC circuit (120VAC, 60Hz) dedicated to the Fire Alarm System.
3. Measure output voltage before connecting devices. This helps avoid potential damage.
4. Connect battery to terminals marked [+ BAT -] on the Power Supply Board (battery leads included).
Use two (2) 12VDC batteries connected in series.
5. Set output selection switches marked [OUT1 through OUT4] to follow corresponding input [IN1 & IN2] and desired output signal type (*Output Programming Selection Table, pg. 4*).
6. Connect FACP output to desired AL800LGK logic board inputs, and notification appliances to desired AL800LGK logic board outputs (*see Application Guide*).
Note: The 2-wire horn/strobe sync mode will only synchronize horns, horn/strobes, strobes with synchronization capability.
7. For connection of smoke detectors, digital dialer (*Optional Hookup Diagram, pg. 7*).

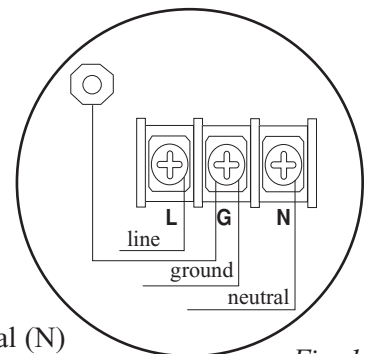


Fig. 1

Class A, Style Z Class B, Style W, X, Y, SW1 & SW2 Settings:

- For all Class B, Style W, X, Y, hookups SW1 & SW2 on the AL800LGK logic board must be open.
For all Class A, Style Z hookups SW1 & SW2 on the AL800LGK logic board must be closed.


Output Programming Selection Table:
Outputs must be programmed independently (OUT1 - OUT4)

Function	Switch Positions		Descriptions
	ON	OFF	
Input to Output Follower Mode	1	2, 3	Output follows signal it receives from the corresponding input (i.e. FACP Sync module - maintains synchronization of notification appliance circuit.
Temporal Code 3 Mode	3	1, 2	Enables Temporal Code 3 signal generation output. This mode will accept a steady or a pulsing input.
Steady Mode		1, 2, 3	A steady output signal will be generated. This mode will accept steady or pulsing input.

For the above modes Dip Switch 4 determines which Input controls the corresponding output:

Switch 4 in the ON position causes output(s) to be controlled by input 1.
 Switch 4 in the OFF position causes output(s) to be controlled by input 2.

(AL800LGK Board)
Output Dip Switches

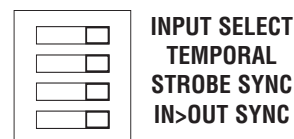

Sync Mode Selection Table:

Function	Switch Positions		Descriptions
	ON	OFF	
Amseco Sync Mode*	1, 3, 4	2	This mode is designed to work with the Amseco series of horns, strobes, and horn/strobes to provide a means of synchronizing the Temporal-coded horns, synchronizing the flash timing of the strobe, and silencing the horns of the horn/strobe combination over a two-wire circuit while leaving strobes active.
Faraday Sync Mode*	2, 4	1, 3	This mode is designed to work with the Faraday series of horns, strobes, and horn/strobes to provide a means of synchronizing the Temporal-coded horns, synchronizing the flash timing of the strobe, and silencing the horns of the horn/strobe combination over a two-wire circuit while leaving strobes active.
Gentex® Sync Mode* <small>Gentex is a registered trademark of Gentex Corporation.</small>	1, 2, 3, 4		This mode is designed to work with the Gentex® series of horns, strobes, and horn/strobes to provide a means of synchronizing the Temporal-coded horns, synchronizing the flash timing of the strobe, and silencing the horns of the horn/strobe combination over a two-wire circuit while leaving strobes active.
System Sensor® Sync Mode* <small>System Sensor is a registered trademark of Honeywell.</small>	1, 2, 4	3	This mode is designed to work with the System Sensor® series of horns, strobes, and horn/strobes to provide a means of synchronizing the Temporal-coded horns, synchronizing the one-second flash timing of the strobe, and silencing the horns of the horn/strobe combination over a two-wire circuit while leaving strobes active.
Wheelock® Sync Mode*	2, 3, 4	1	This mode is designed to work with the Wheelock series of horns, strobes, and horn/strobes to provide a means of synchronizing the Temporal-coded horns, synchronizing the one-second flash timing of the strobe, and silencing the horns of the horn/strobe combination over a two-wire circuit while leaving strobes active.

Note: The AL1002ULADA will only synchronize horns, horn/strobes and strobes that contain synchronization capability. Contact signal manufacturer for more detailed info. The same synchronization mode must be selected for all outputs.

Note: It is required to control visual notification appliances (strobes) via input 1 (IN1) and audible notification appliances (horns) via input 2 (IN2). This allows audible notification appliances (horns) to be silenced while visual notification appliances (strobes) continue to operate.

**Terminal Identification Table:
AL800LGK Logic Board**

Terminal Legend	Function/Description
IN1+, IN1- IN2+, IN2-	These terminals connect to the 12VDC or 24VDC FACP notification appliance circuit outputs. (Class A, Style Z or Class B, Style W, X, Y) Input trigger voltage is 9-30VDC @ 5mA min. Terminal polarity is shown in alarm condition. During an alarm condition these inputs will cause the selected outputs chosen to drive notification appliances. The designated outputs are set by output switches [OUT1 through OUT4] (<i>Output Programming Selection Table, pg. 4</i>). A trouble condition on an output loop will cause the corresponding input to trip the FACP by opening the FACP loop. An alarm condition will always override trouble to drive notification appliances.
RET1+, RET1- RET2+, RET2-	For (Class A, Style Z hookups these terminal pairs return to FACP NAC1 and/or NAC2. For Class B, Style W, X, Y hookups the FACP EOL resistor from the NAC1 and/or NAC2 outputs are terminated at these terminals. Optionally, other notification appliances or additional signaling circuit power supplies may be connected to these terminals. If this option is chosen the EOL resistor must be terminated at the last device.
+ OUT1 - + OUT2 - + OUT3 - + OUT4 -	Notification appliances are connected to these outputs (<i>see Application Guide pg. 2-4</i>). Each power limited output will supply 2.5 amp. Two (2) outputs may be connected in parallel for a maximum NAC output capability of 4 amp. Total supply current is 10 amp (<i>see note below</i>). Outputs are controlled by designated input 1 [IN1] or input 2 [IN2] (<i>Output Programming Selection Table, pg. 4</i>).
C “FAULT” NC (Common trouble input)	An open circuit across this pair of terminals will cause [IN1 and IN2] to simultaneously signal a trouble condition back to the FACP (Typically used to report AC or BAT Fail). (form “C” contact 1 amp / 28VDC) (<i>Fig. 2, pg. 7</i>).
NC, C, NO (Common trouble output)	These are dry contact trouble outputs that follow any general loop/system trouble conditions. (Typically used to trigger a digital communicator or other reporting device). (form “C” contact 1 amp / 28VDC) (<i>Fig. 2, pg. 7</i>).
- AUX+	This separate 1 amp max auxiliary regulated power output circuit is typically used to power 4-wire smoke detectors.
+ DC -	24VDC from power supply.

Note: Unit is equipped with 1 amp max. auxiliary output: “AUX” will remain battery backed up during power outage. For loads connected to “AUX” please, refer to battery “Stand-by Specifications” above for ratings. When loads are connected to “AUX” output during alarm condition, the remaining outputs may, not exceed 10 amp total alarm current (example: AUX = 1 amp, outputs up to 9 amp).

Power Supply Board*

Terminal Legend	Function/Description
L, G, N	Connect 120 VAC to these terminals: L to hot, N to neutral, G to ground.
- DC +	24VDC @ 8 amp continuous, 10 amp in alarm non-power limited output.
AC FAIL C, NC, NO	Form “C” dry contacts used to signal the loss of AC, with AC present terminals marked NO and C are open, NC and C are closed. When loss of AC occurs terminals marked NO and C close, NC and C are open.
AC LOCAL C, NC, NO	Form “C” dry contacts used to instantaneously signal the loss AC to local annunciation devices, with AC present terminals marked NO and C are open, NC and C are closed. When loss of AC occurs terminals marked NO and C are closed, NC and C are open.
BAT FAIL NO, NC, C	Form “C” dry contacts used to signal low battery voltage or loss of battery voltage. Under normal conditions terminals marked NO and C are open, NC and C are closed. During a trouble condition terminals marked NO and C are closed, and NC and C are open (<i>Fig. 2, pg. 7</i>).
+ BAT -	Stand-by battery input (leads provided) (<i>Fig. 2, pg. 7</i>).

*Power Board Parameter Specifications:

- AC Fail condition will report approximately 30 seconds after loss of AC. To delay report for 2 hours cut jumper J2 on the Power Supply Board (AC trouble output delay option). If this mode is selected the Power Supply Board must be reset by removing all power to it for 30 seconds (*Fig. 2, pg. 7*).
- Low battery condition will report at approximately 21VDC.
- Battery presence detection will report with in 180 seconds after battery remains undetected (missing or removed). A restored battery will report within 30 seconds.

LED Diagnostics:

AL1024ULXB - Power Supply Board

Red (DC)	Green (AC)	Power Supply Status
ON	ON	Normal operating condition.
ON	OFF	Loss of AC, Stand-by battery supplying power.
OFF	ON	No DC output.
OFF	OFF	Loss of AC. Discharged or no stand-by battery. No DC output.

AL800LGK - Logic Board

LED	OFF	ON	BLINK (LONG)*	BLINK (SHORT)**
Out 1	Normal	Alarm Condition	Trouble Condition	Trouble Condition Memory
Out 2	Normal	Alarm Condition	Trouble Condition	Trouble Condition Memory
Out 3	Normal	Alarm Condition	Trouble Condition	Trouble Condition Memory
Out 4	Normal	Alarm Condition	Trouble Condition	Trouble Condition Memory
Input 1	Normal	Alarm Condition	Trouble Condition	—
Input 2	Normal	Alarm Condition	Trouble Condition	—
Fault	Normal	System Trouble	—	—


* Indicates current trouble condition. When trouble (open, short or ground) occurs on a specific output, the corresponding red output LED, [OUT1-OUT4] will blink. The corresponding green input LED will blink as well. Loop trouble will report within 30 seconds.

**Indicates trouble condition memory. When a trouble condition restores, the units red output LED, [OUT1-OUT4] will blink with a shorter and distinctly a different duration. The green input LEDs will be off (normal condition). To reset the memory depress the reset button (*Fig. 2C, pg. 7*). The LED(s) will extinguish.

Note: If indicating circuits have been restored, memory reset is not required for normal operation of the unit.

Optional Hookup Diagram:

Fig. 2

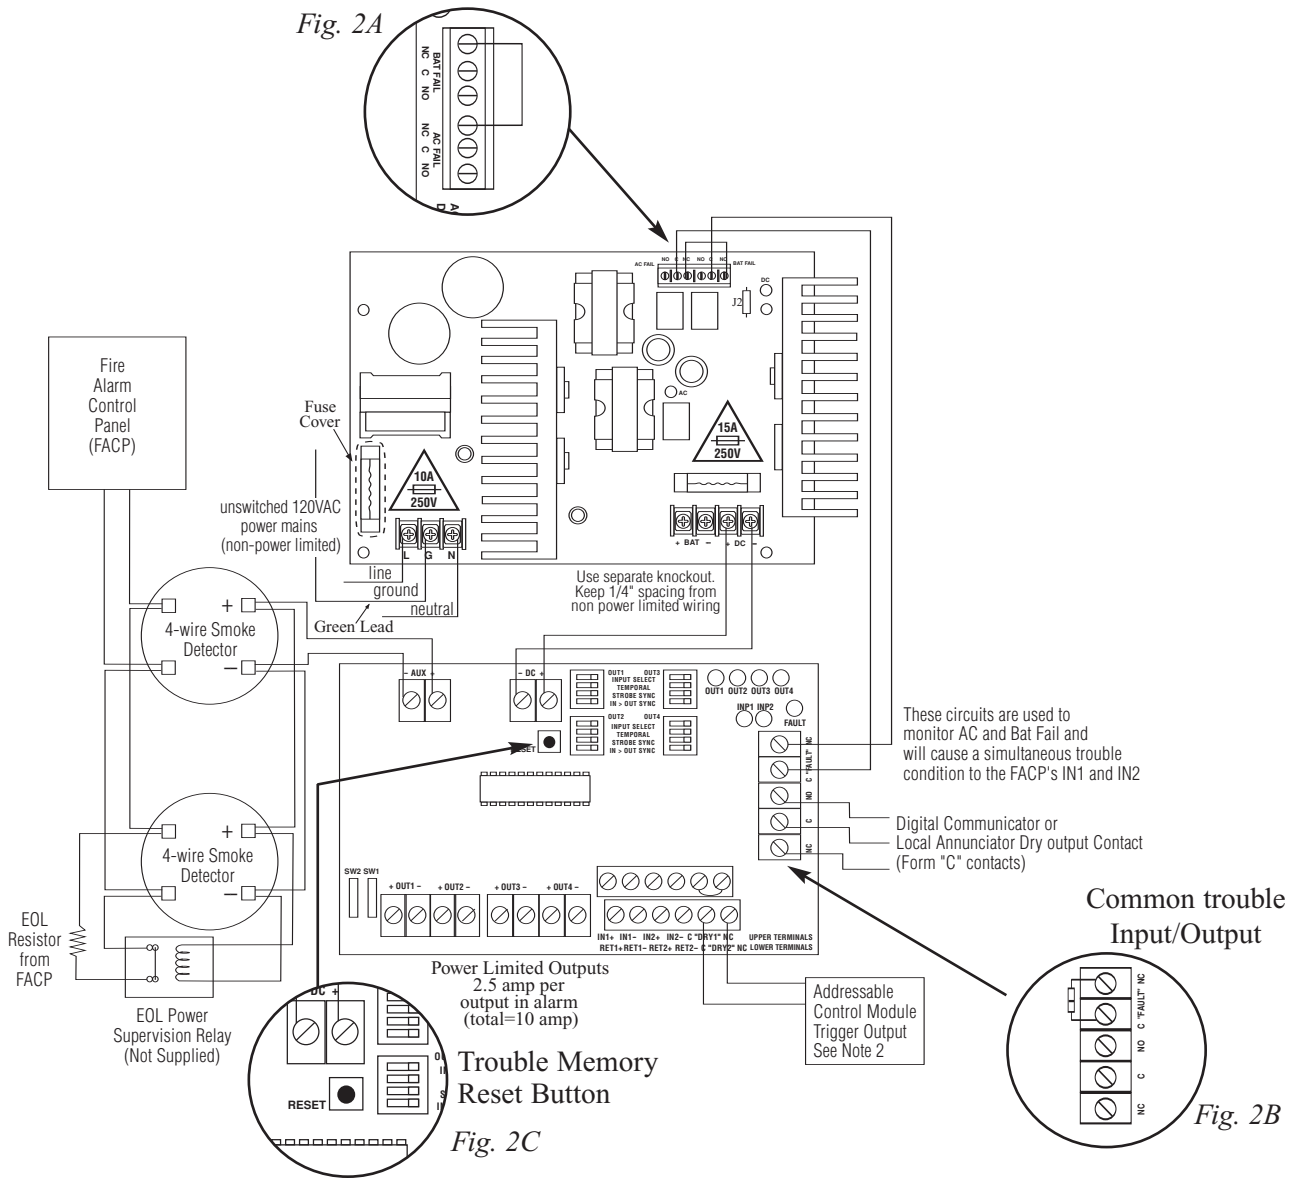

Optional hookups:

- 1- Battery and AC monitoring: AC or Battery Fail condition will cause the common trouble input (C "FAULT" NC) to report back to the FACP via input 1 and input 2. The common trouble input may also be used for other optional supervisory monitoring.
To report AC and Battery Trouble connect the battery and AC Fail relay output shown in (Fig. 2A) to the common trouble input.
- 2- Dry contact input (IN1DRY, IN2DRY) (IN1DRY, IN2DRY) can be used to alarm output from an addressable module (these inputs are unidirectional and cannot report back to trigger module).
Note: If common trouble input, terminals marked [C "FAULT" NC] are not used, these terminals must be shorted (connect jumper) to remain inactive. For optional hookups (Fig. 2B).
- 3- Auxiliary output (-AUX+) 24VDC at 1 amp max.

Maintenance:

Unit should be tested at least once a year for the proper operation as follows:

Output Voltage Test: Under normal load conditions, the DC output voltage should be checked for proper voltage level (26.2-26.4VDC recommended range).

Battery Test: Under normal load conditions check that the battery is fully charged. Check specified voltage both at battery terminal and at the board terminals marked [+ BAT -] to insure there is no break in the battery connection wires.

Fuses: Check input and output fuses on the power supply board, replace if necessary. Input fuse rating is 10 amp @ 250V, Output fuse rating is 15 amp @ 32V

Note: Maximum charging current is 3.2 amp.

Note: Expected battery life is 5 years, however it is recommended changing batteries in 4 years or less if needed.


Battery Calculation Worksheet

Device	Number of Devices	Current per Device		Stand-by Current	Alarm Current
For each device use this formula:	This column	x	This column	=	Equals
AL1002ULADA (Current draw from battery)	1	Stand-by:	90mA	90mA	
		Alarm:	175mA		175mA
A	AL1002 Current			90mA	175mA
Auxiliary Devices		Refer to device manual for current ratings.			
		Alarm/Stand-by	mA	mA	mA
		Alarm/Stand-by	mA	mA	mA
		Alarm/Stand-by	mA	mA	mA
		Alarm/Stand-by	mA	mA	mA
B	Auxiliary Devices Current (must not exceed 1 amp)				
Notification appliances		Refer to device manual for current ratings.			
		Alarm:	mA	0mA	mA
		Alarm:	mA	0mA	mA
		Alarm:	mA	0mA	mA
		Alarm:	mA	0mA	mA
C	Notification Appliances Current must not exceed 10 amp (10000mA)			0mA	mA
D	Total alarm current			mA	mA
E	Total current ratings converted to amperes (line D x .001)			A	A
F	Number of standby hours (24 or 60 for NFPA 72, Chapter 1, 1-5.2.5).			H	
G	Multiply lines E and F.		Total stand-by AH	AH	
H	Alarm sounding period in hours. (For example, 5 minutes = .0833 hours.)				H
I	Multiply lines E and H.		Total alarm AH		AH
J	Add lines G and I.		Total stand-by and alarm AH	AH	
K	Multiply line J by 1.30. (30% extra insurance to meet desired performance) Total ampere - hours required			AH	

Units are capable of recharging 65 AH battery max. If total ampere - hour required exceeds 50 AH, decrease AUX current to provide enough stand-by time for the application.

Enclosure Dimensions:

15.5"H x 12"W x 4.5"D

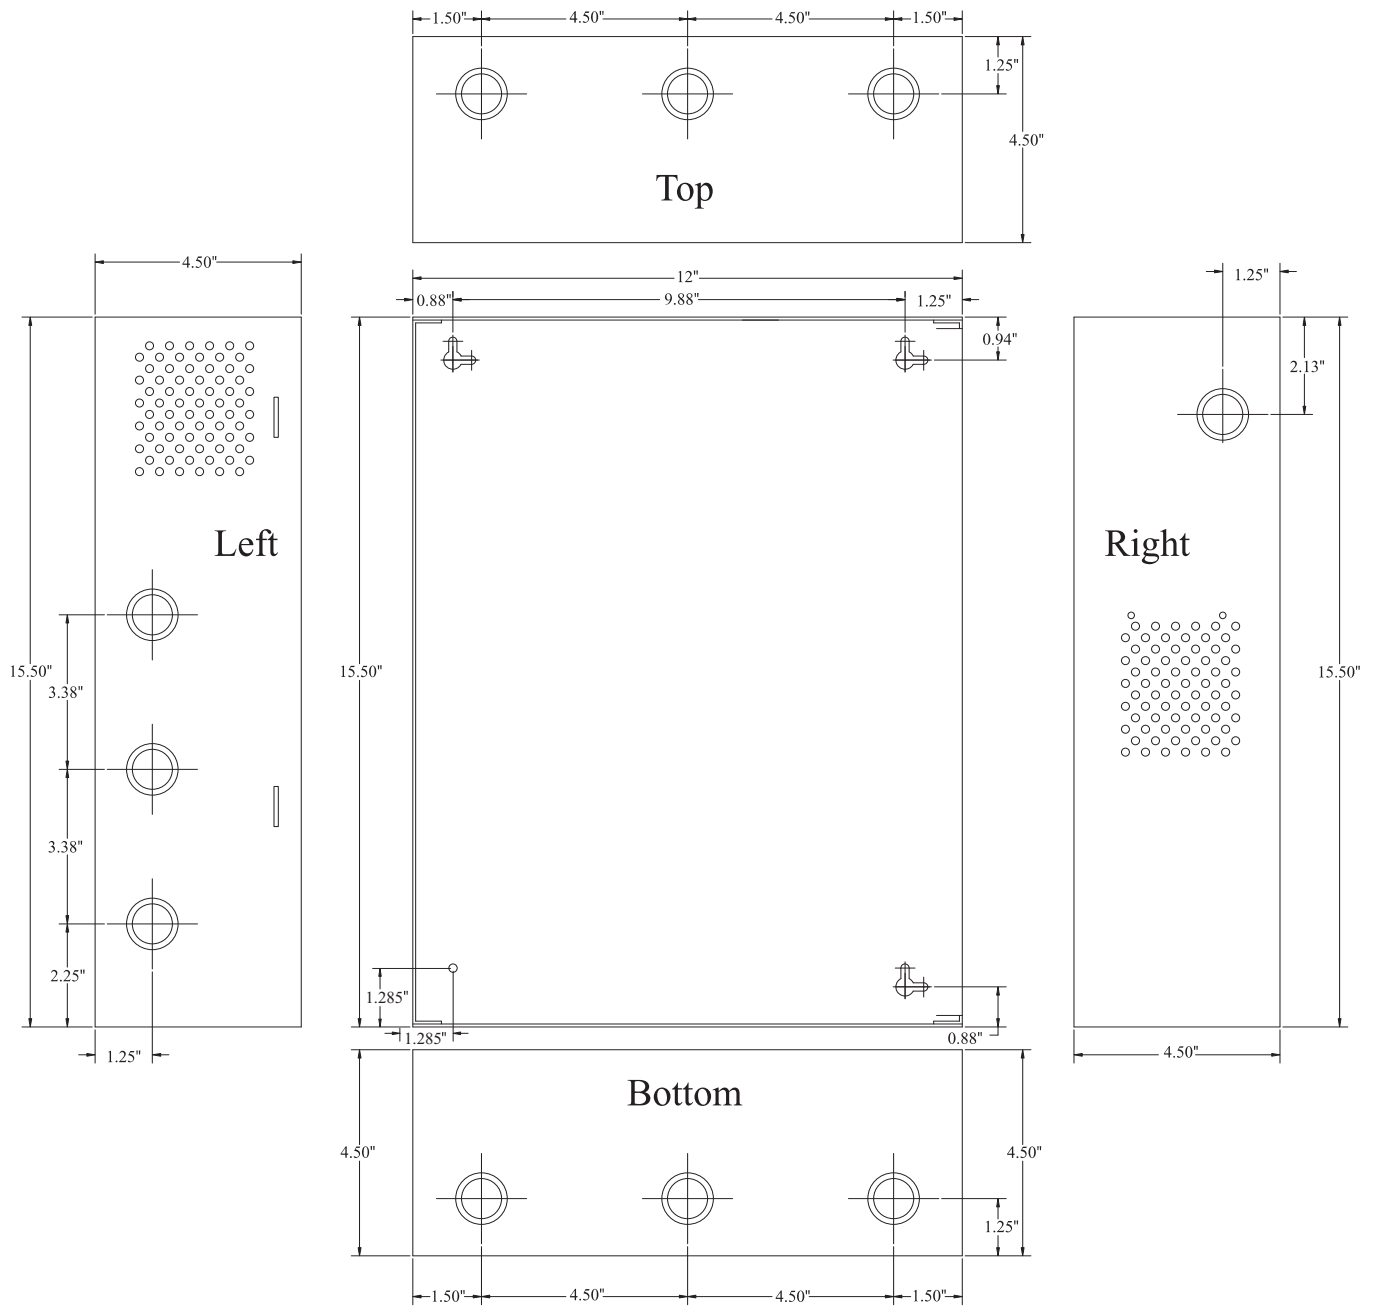

Notes:

Notes:

Altronix is not responsible for any typographical errors.

140 58th Street, Brooklyn, New York 11220 USA, 718-567-8181, fax: 718-567-9056
web site: www.altronix.com, e-mail: info@altronix.com, Lifetime Warranty, Made in U.S.A.
IAL1002ULADA J23G

